

Ikegami

HDR

HLM-2460WA

24-inch Full HD Multi-format LCD Monitor




REAR PANEL

Building on the renowned features and performance of its predecessor, the HLM-2460WA reproduces more accurate dynamics of the source images thanks to a newly-developed LCD panel with an impressive 1800:1 contrast ratio. Seamless tally integration via Ethernet is made possible by the support of the TSL V5.0 protocol. The HLM-2460WA fits into various broadcast workflow applications, including editing suites where a computer-friendly WUXGA display resolution is preferred, as well as monitor walls, among others.


◆ Loaded with Information Display

The HLM-2460WA supports dynamic and static UMD in addition to the features shown below.

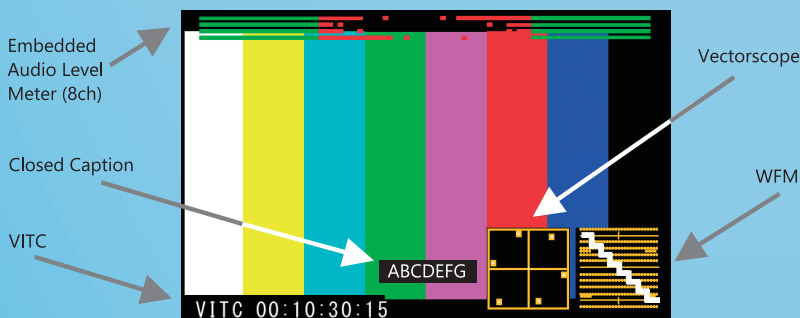

◆ User Defined Markers

A program production aid allowing up to 12 lines or boxes to be displayed. These can be drawn easily using a USB mouse.

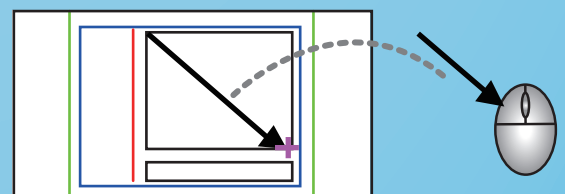

◆ Automatic Calibration (Optional)

Optional AWC software ensures consistent and accurate color reproduction over time. By acquiring real-time measurement data via a colorimeter, Windows-based software automatically aligns the R/G/B gain to exhibit the correct white balance.

Compatible Colorimeters :
Konica Minolta CA-310 / CA-410
JETI Specbos 1211-2
Klein Instruments K10-A

Specifications

Display Panel	LCD Type		IPS Type	
	Resolution		1920 x 1200	
	Display Size		24-inch	
	Brightness		400 nits	
	Contrast Ratio		1800:1	
	Display Color		1.07 billion colors	
	Viewing Angle		178° (Up & Down, Left & Right)	
Ratings	Power Requirement		100 to 120 / 200 to 240 V AC	
	Power Consumption		59 W Max	
	Dimensions		W 562 x H 398 x D 86 mm (22.1 x 15.7 x 3.4 inches) 9 RU Height, Excluding Desktop Stand	
	Weight		Approx 9.1 kg (20.06 lb) Excluding Desktop Stand	
Video	Input / Output	3G/HD/SD-SDI	2-input / 2-output (Active Through) or 4-input	
		VBS	1-input / 1-output (Loop Through)	
		HDMI	1-input (HDCP)	
	Supported Formats	HDTV		1080i/50/59.94/60
				1080p/25/29.97/30/50/59.94/60
				1080PsF/25/29.97/30
				720p/25/29.97/30/50/59.94/60
				1035i/59.94/60 (SDI only)
		SDTV		480i/59.94, 576i/50
				480p/59.94, 576p/50 (HDMI only)
Audio	Input	Embedded Audio	● (SDI & HDMI)	
		Analog Audio	● (Stereo Mini Jack)	
	Output	Embedded Audio	● (SDI)	
		Speakers	● 1W + 1W	
		Headphones	● (Stereo Mini Jack)	
Control	Ethernet		● Remote Control & Tally / UMD (TSL V5.0)	
	RS-485		● Tally / UMD (TSL V3.1)	
	GPIO		●	

Design and specifications are subject to change without notice.

● : Standard



Ikegami Tsushinki Co., Ltd.

■ URL: www.ikegami.co.jp/en/

U529B246-SELF

■ Headquarters : 5-6-16 Ikegami, Ohta-ku, Tokyo 146-8567, Japan TEL. +81-(0)3-5700-1111
 ■ Beijing Office : Tower A Room No.823-824 Jia Tai International Mansion No.41
 East Fourth Ring Road, Chaoyang District, Beijing, China TEL. +86-10-8571-0350

Ikegami Electronics (U.S.A.), INC.

■ URL: www.ikegami.com

■ Headquarters : 300 Route 17 South, Mahwah, NJ 07430 USA TEL. +1-201-368-9171

Ikegami Electronics (Europe) GmbH

■ URL: www.ikegami.de

■ Headquarters : Ikegami Strasse 1, D-41460 Neuss, Germany TEL. +49-(0)2131-1230

Ikegami Electronics Asia Pacific Pte.Ltd.

■ URL: sg.ikegami.co.jp

■ Headquarters : 1 Tampines Central 5, #06-04 CPF Tampines Building, Singapore 529508 TEL. +65-6260-8820

