


# Ikegami

# HDR

## HLM-1860WR

### 18.5-inch Full HD Multi-format LCD Monitor

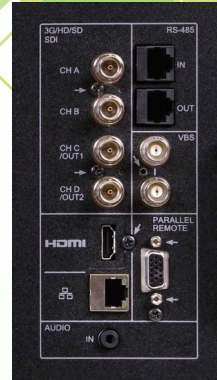


REAR PANEL

The HLM-1860WR features a larger 18.5-inch LCD panel within the same 19-inch rack-width 7RU chassis as its predecessor. Seamless tally integration via Ethernet is made possible by the support of the TSL V5.0 protocol. The bright LCD panel boasting 500 nits reproduces clear images even in environments with predominant ambient light. The HLM-1860WR fits into outdoor as well as indoor monitoring applications.


#### ◆ Loaded with Information Display

The HLM-1860WR supports dynamic and static UMD in addition to the features shown below.

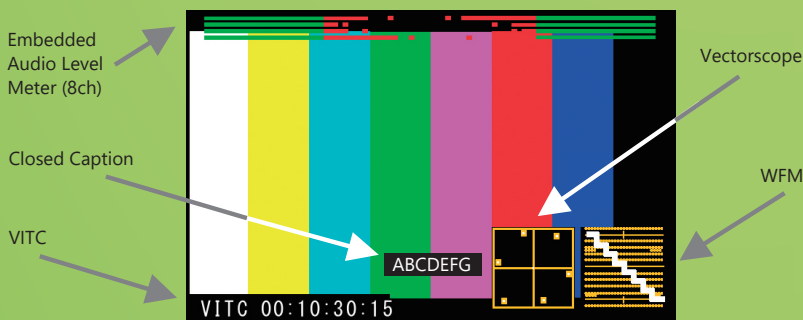

#### ◆ User Defined Markers

A program production aid allowing up to 12 lines or boxes to be displayed. These can be drawn easily using a USB mouse.

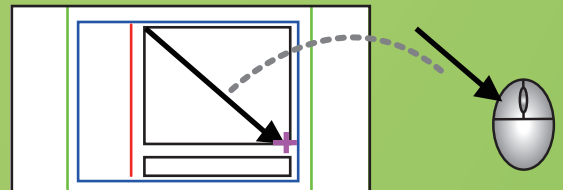

#### ◆ Automatic Calibration (Optional)

Optional AWC software ensures consistent and accurate color reproduction over time. By acquiring real-time measurement data via a colorimeter, Windows-based software automatically aligns the R/G/B gain to exhibit the correct white balance.

Compatible Colorimeters :  
Konica Minolta CA-310 / CA-410  
JETI Specbos 1211-2  
Klein Instruments K10-A

## Specifications

Display Panel	LCD Type		IPS Type	
	Resolution		1920 x 1080	
	Display Size		18.5-inch	
	Brightness		500 nits	
	Contrast Ratio		1000:1	
	Display Color		16.77 million colors	
	Viewing Angle		178° (Up & Down, Left & Right)	
Ratings	Power Requirement		AC: 100 to 120 / 200 to 240 V DC: 10.5 to 18 V	
	Power Consumption		AC: 48 W Max DC: 43.2 W Max	
	Dimensions		W 440 x H 301 x D 80 mm (17.3 x 11.9 x 3.2 inches) 7 RU Height	
	Weight		Approx 6.0 kg (13.23 lb)	
Video	Input / Output	3G/HD/SD-SDI	2-input / 2-output (Active Through) or 4-input	
		VBS	1-input / 1-output (Loop Through)	
		HDMI	1-input (HDCP)	
	Supported Formats	HDTV	1080i/50/59.94/60	
			1080p/25/29.97/30/50/59.94/60	
			1080PsF/25/29.97/30	
			720p/25/29.97/30/50/59.94/60	
			1035i/59.94/60 (SDI only)	
		SDTV	480i/59.94, 576i/50	
			480p/59.94, 576p/50 (HDMI only)	
Audio	Input	Embedded Audio	● (SDI & HDMI)	
		Analog Audio	● (Stereo Mini Jack)	
	Output	Embedded Audio	● (SDI)	
		Speaker	● 1W (Mono)	
	Headphones	● (Stereo Mini Jack)		
Control	Ethernet		● Remote Control & Tally / UMD (TSL V5.0)	
	RS-485		● Tally / UMD (TSL V3.1)	
	GPIO		●	

● : Standard

Design and specifications are subject to change without notice.

**Ikegami Tsushinki Co., Ltd.**■ URL: [www.ikegami.co.jp/en/](http://www.ikegami.co.jp/en/)

U531B244-SELF

■ Headquarters : 5-6-16 Ikegami, Ohta-ku, Tokyo 146-8567, Japan ..... TEL.+81-(0)3-5700-1111

■ Beijing Office : Tower A Room No.823-824 Jia Tai International Mansion

No.41 East Fourth Ring Road, Chaoyang District, Beijing, China ..... TEL.+86-10-8571-0350

**Ikegami Electronics (U.S.A.), INC.**■ URL: [www.ikegami.com](http://www.ikegami.com)

■ Headquarters : 300 Route 17 South, Mahwah, NJ 07430 USA ..... TEL.+1-201-368-9171

**Ikegami Electronics (Europe) GmbH**■ URL: [www.ikegami.de](http://www.ikegami.de)

■ Headquarters : Ikegami Strasse 1, D-41460 Neuss, Germany ..... TEL.+49-(0)2131-1230

**Ikegami Electronics Asia Pacific Pte. Ltd.**■ URL: [sg.ikegami.co.jp](http://sg.ikegami.co.jp)

■ Headquarters : 1 Tampines Central 5, #06-04 CPF Tampines Building, Singapore 529508 ..... TEL.+65-6260-8820

